

Set up Hints for Canon Tank Sets

*WHEN USED WITH A COMPUTER OR AS A STAND ALONE


Read Carefully

- Do not remove colored plugs except to refill Edible Ink Tanks
- Insert the correct color ink tank into the holder of the same color in your printer
- Press down each ink tank until it “Clicks”! Tanks with a chip will show a red light when installed properly.
- Close the printer cover
- Settings for All-in-One and Computer operated printers- make sure your settings are as follows:


Print Quality = “High”

Paper Type = “Plain Paper” and/or “High Resolution”

**Save the “Orange Clip or Clear Plastic Holder”
for refilling edible ink cartridges**


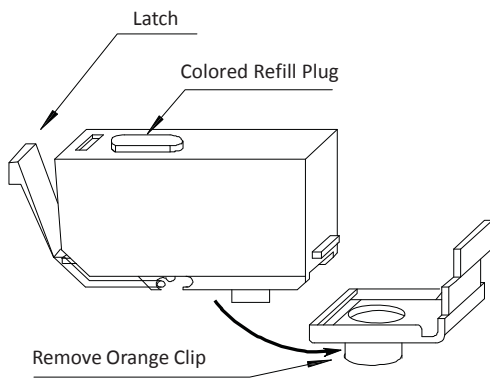


CP42 & 6000 Series

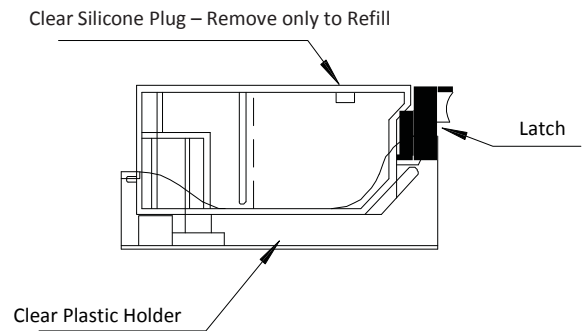

225, 235, 525, 535 SERIES

Press each cartridge down until it "CLICKS."
*Tanks with a chip will show a red light when installed properly.

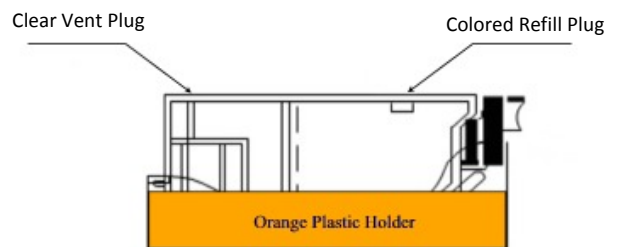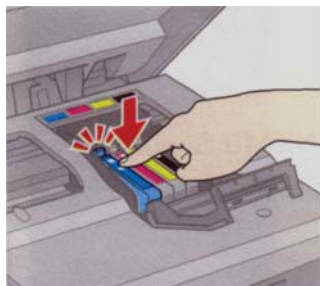

255, 755 SERIES

***** Due to shelf life and other health issues, Kopykake does not allow returns of Edible Ink Tanks *****