

READ ME FIRST!

Reading these instructions will help you refill your Kopykake Edible Ink Kartridges safely and quickly.



- Refill Kit Includes:**
4x 2oz Bottles of Refill Edible Ink (Black, Cyan, Magenta and Yellow)
4x Caps with Needles



Instructions for Refilling Edible Ink Kartridges (Canon, Epson and/or Brother Edible Ink tanks)

1. Remove the empty Kartridge(s) from the Print Head and place onto some paper towels in an area you can tolerate spills.
2. Some kartridges have both a silicone vent plug and a colored refill plug. The vent plug "MUST" be removed and discarded before installing in Printer!
3. Place the Needle into the Cap of the Refill color bottle you will use, then screw the Cap onto the Refill bottle.
4. Insert Needle into the refill hole in the corresponding color chamber and squeeze the Refill bottle to fill the chamber.
5. Once all chambers are full with the appropriate color, replace refill plugs and place the kartridge(s) back into the Printer.

Do Not remove kartridges unless you are going to be refilling them.

(canon and epson have auto reset chips)

NOTE: We recommend NOT to refill a Canon kartridge more than 3 times!

Caution: Do Not Allow Inks to mix

Cleaning Your Print Head

Remember to regularly clean your Print Head by conducting a nozzle check at the end of every week. By doing so it will help prevent printing problems. The best method we have found is to use our Syringe Cleaning Kit (Epson/Brother/Canon), it will remove deep clogs and help bring your Print-Head back to life! Or see our HELP section on our website for additional cleaning info:
<http://www.kopykake.com/help.html>

Refilling Individual Kartridges (for newer Canon, Epson and Brother Printers)

1. Canon Kartridges must be placed back into plastic carrier before refilling. Remove the clear or colored plug for refilling.



2. Insert Needle of Refill bottle into hole and squeeze to refill empty chamber. Make sure reservoir tank is always full (Epson).



3. Refill the ink kartridge about 90-95% full



4. Replace the colored refill plug back onto the ink tank.



5. Insert Re-Filled Kartridge back into printer/print head. If printer asks if "ink has been replaced select, YES!



Epson/Canon Dual Refill Kit RFK02 and RFK02-6

RFK02

1- 2 oz Black, 1 - 2 oz Cyan
 1 - 2 oz Magenta, 1 - 2 oz Yellow
 4 - Caps and needles (Epson & Canon)


RFK02-6

1- 2 oz Black, 1 - 2 oz Cyan, 1 - 2 oz Magenta
 1 - 2 oz Yellow, 1 - 2 oz photo Cyan, 1 - 2 oz Photo Magenta
 6 - Caps and needles (Epson & Canon)

Refills also available in 8 oz, 32 oz and 128 oz Bottles

Canon CP42 and 6000 Series



1. Remove cartridge from printer
2. Reattach orange cap to bottom of cartridge.
3. Remove silicone plug from fill hole at top of cartridge.
4. Using needle, refill cartridge leaving airspace at top of tank.
5. Replace plug in fill hole, remove orange cap and install in printer

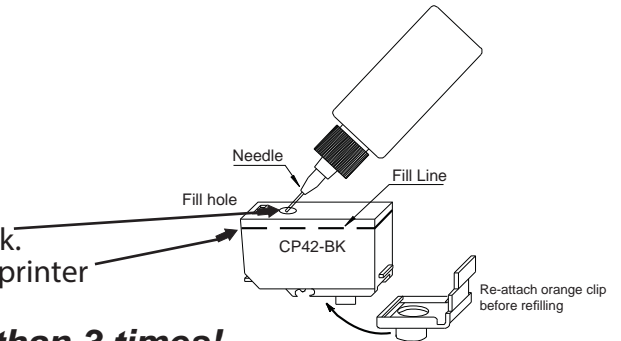

CP and 6000 Series Can Not be refilled more than 3 times!


Canon C225SET-5, C235SET-5 and C525SET-5E

1. Remove cartridge from printer
 2. Place cartridge in clear shipping holder received with cartridge.
 3. Remove clear silicone plug from fill hole.
 4. Using needle, refill cartridge to fill line shown in drawing at right.
 5. Replace silicone plug. Remove from holder and install in printer.
- * Chip will only reset when the following message appears on screen:
 See image at right..

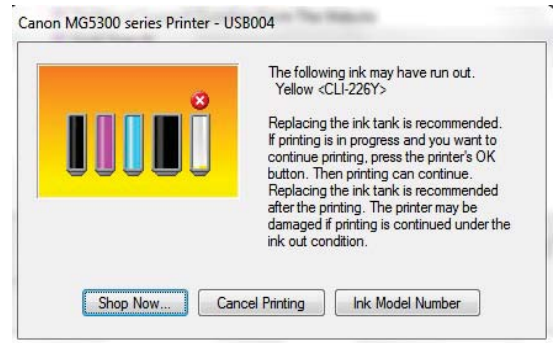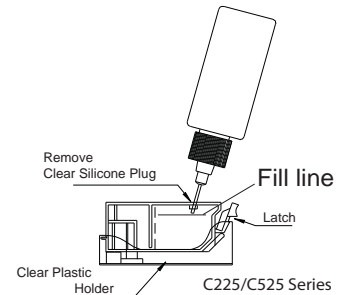

Epson T0695SET Series, ESET605 Series

1. Remove cartridge from printer.
2. Remove silicone plug from fill hole at top of cartridge.
3. Using needle, refill cartridge leaving airspace at top of tank.
4. Replace plug in fill hole and install in printer. Chip will reset automatically.

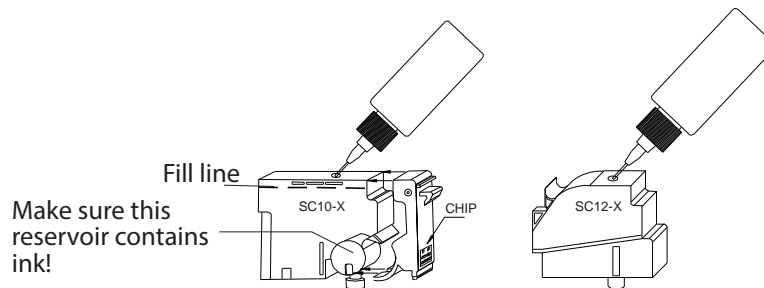

Sc10 & Sc12 Tanks can be filled from the top.

Special Notes:

Epson T0695SET's, ESET605, Sc10 & SC12 Tanks have auto-reset chips, they do not require a chip resetter.